



RoHS



E345286

## UL Classified LED Tube Lamps ROTATED SINGLE OR DOUBLE END POWERED

### TURN OFF POWER TO THE FIXTURE.

Open the unit and access the ballast chamber.

Disconnect the power to the input side of the fluorescent ballast.

If more than one lamp is to be used in the fixture, wire each of the sockets in the manner described in the wiring diagrams below. **MAKE SURE THAT THE CORRECT WIRING DIAGRAM IS USED FOR THE SPECIFIC LAMP TYPE BEING INSTALLED!** Physical removal of the now unpowered and unused ballast is optional.

Replace the ballast cover.


**IF USING DOUBLE END POWERED LAMPS DO NOT REMOVE THE PLASTIC PIN COVERS! ALLOW THEM TO BE PUSHED OFF BY THE SOCKETS AS THE LAMP IS INSERTED! TOUCHING OF LAMP PINS DURING INSTALLATION CAN BE FATAL IF THE PINS ARE TOUCHED WHILE THE FIXTURE IS POWERED!**

It does not matter which end of the double end powered lamp is put in which socket. The double end powered lamps are reversible end for end. The RED DOT end of the single end powered lamp must be inserted into the powered socket. Close the luminaire. Power up the fixture. The lamps will light instantly.

**NOTE: IF THE LED TUBE IS FLASHING, THE TUBE IS SIGNALING THAT THE WIRING IS NOT CORRECT. START OVER AND MAKE SURE ALL OF THE STEPS WERE PROPERLY FOLLOWED.**

**WIRING DIAGRAMS:** Disconnect ballast and power leads on the fixture. Rewire as shown for the tube being used. Tube will not operate properly unless the power is applied correctly.

#### DOUBLE End Power LED Tube

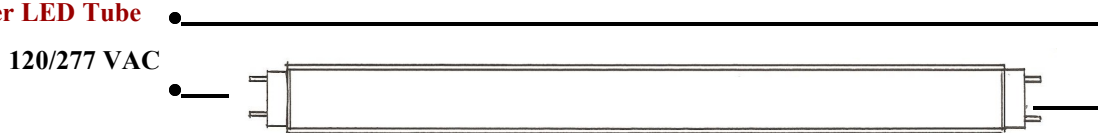

#### SINGLE End Power LED Tube

